

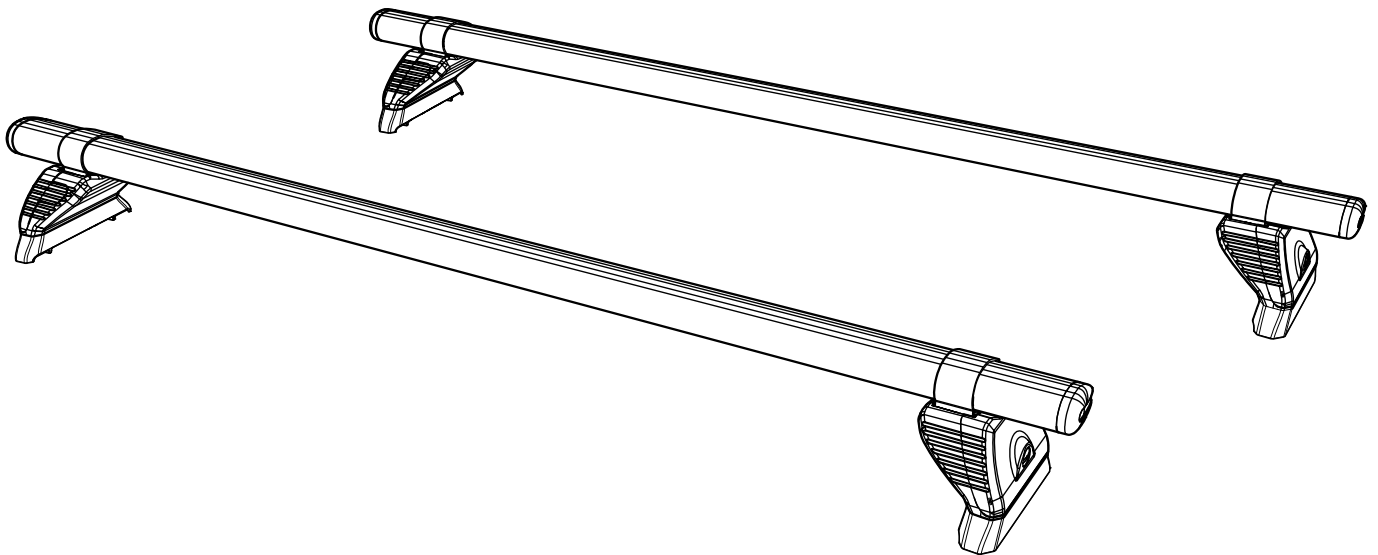
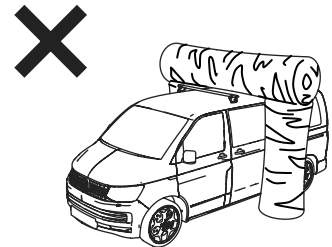
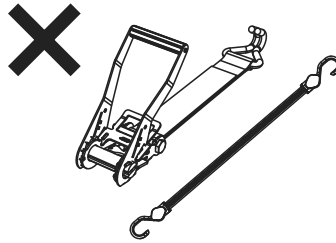
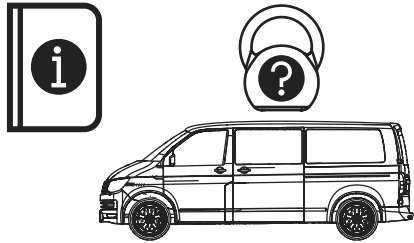


JD2PR/FL KammBar Instructions


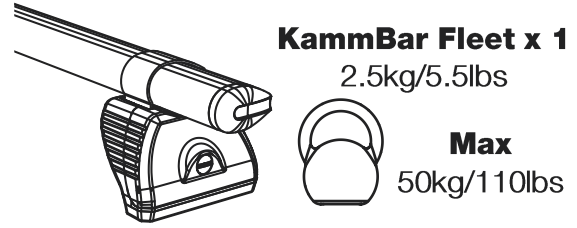


CITY CRASH (✓)



According to ISO/ PAS 11154:2006

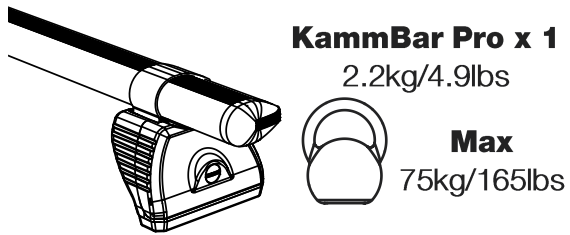




KammBar Pro

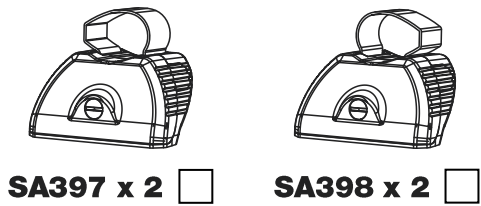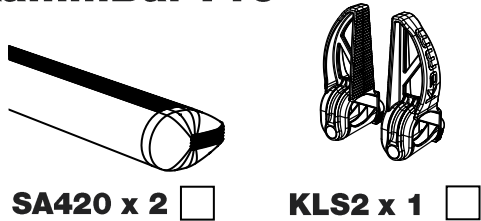


KammBar Fleet

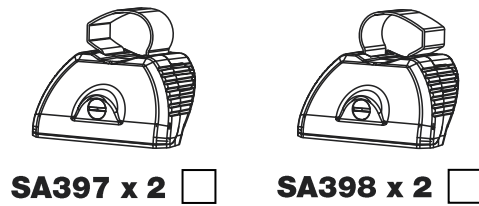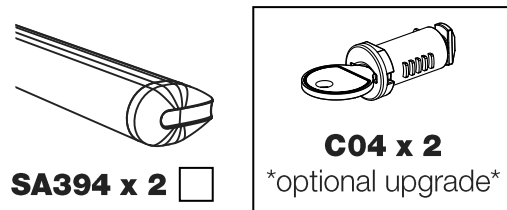


Fitting Kit

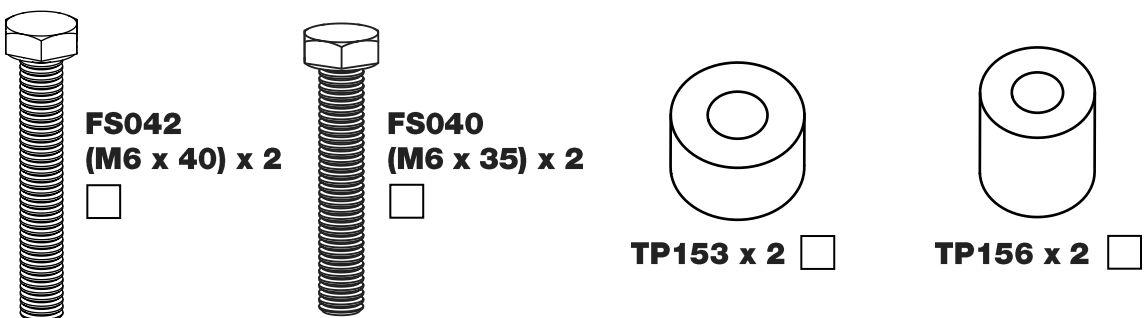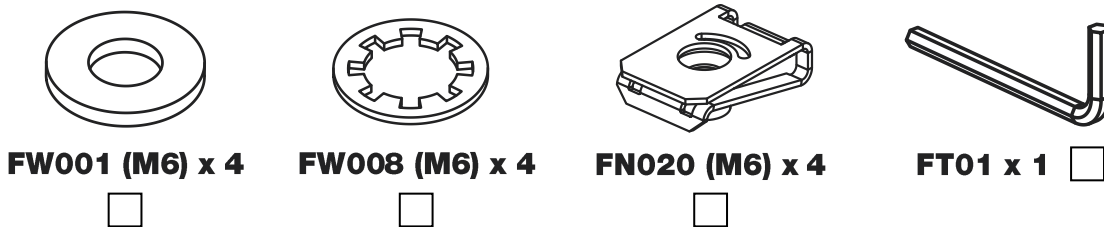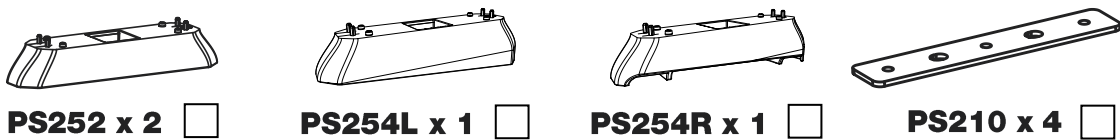

1.

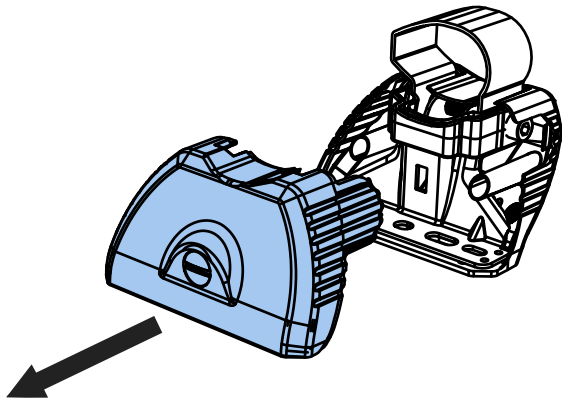

2.

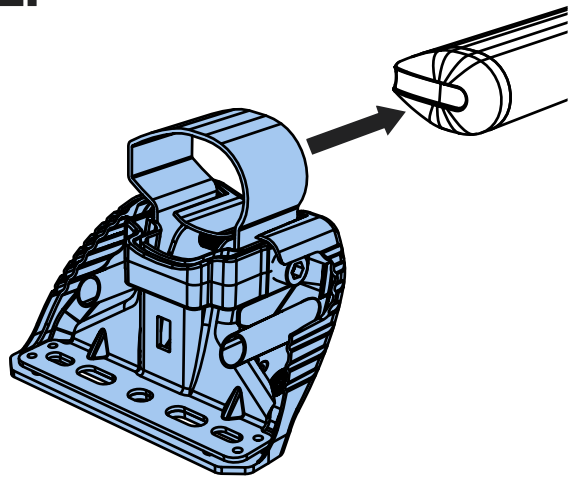


3.




SA397
PS254R

SA398
PS254L

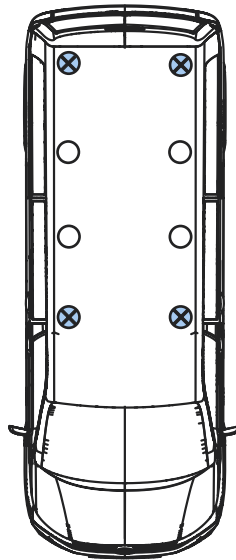


SA397
PS252


SA398
PS252




4.

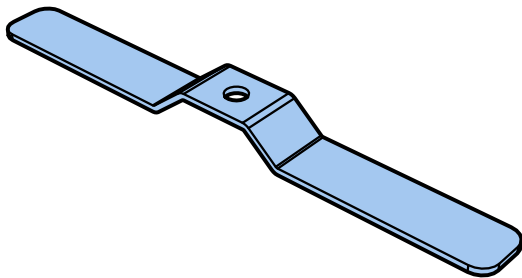


5.

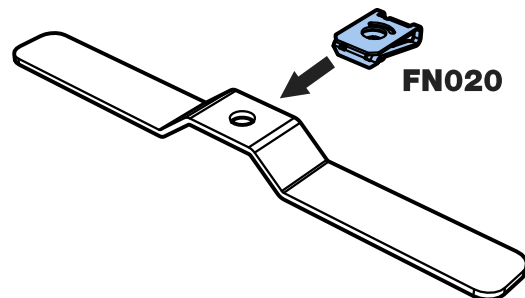


6.

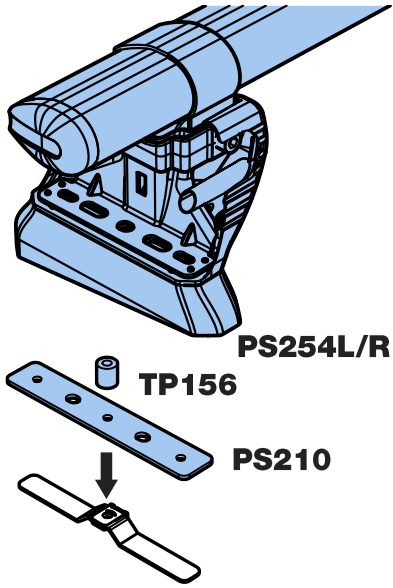


7.

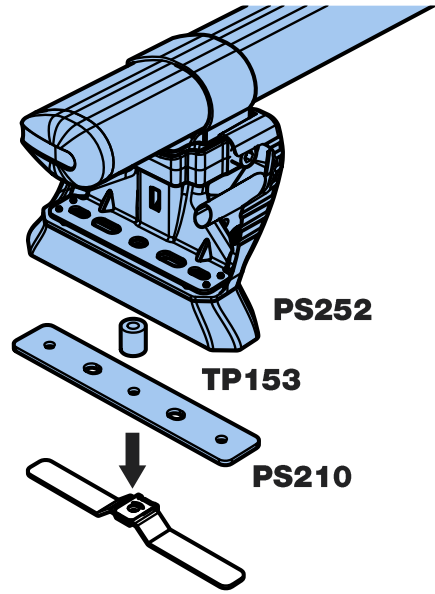


8.

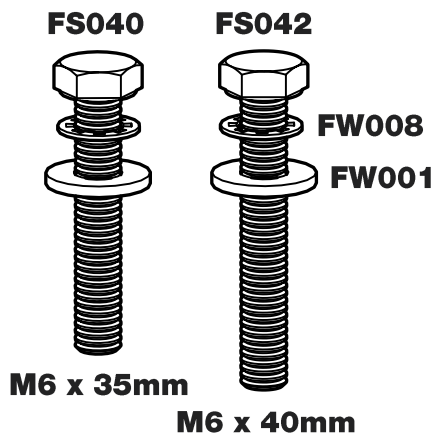


9.

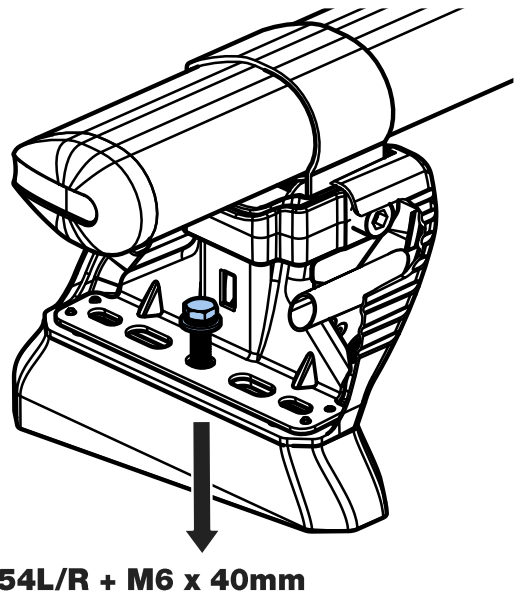


10.

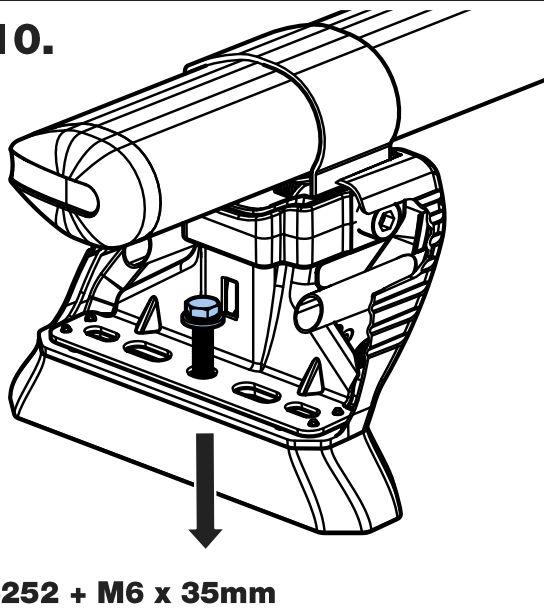


11.

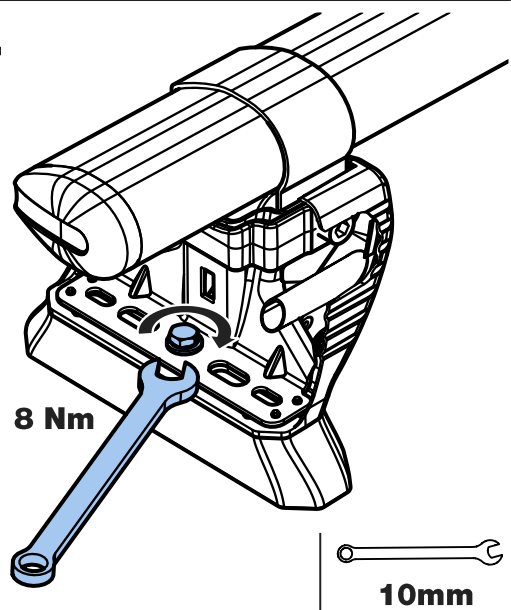


12.

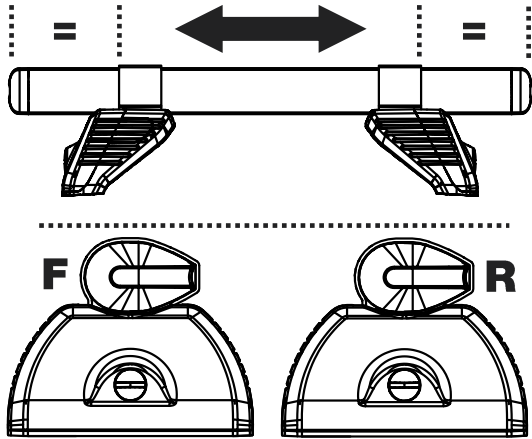

13.

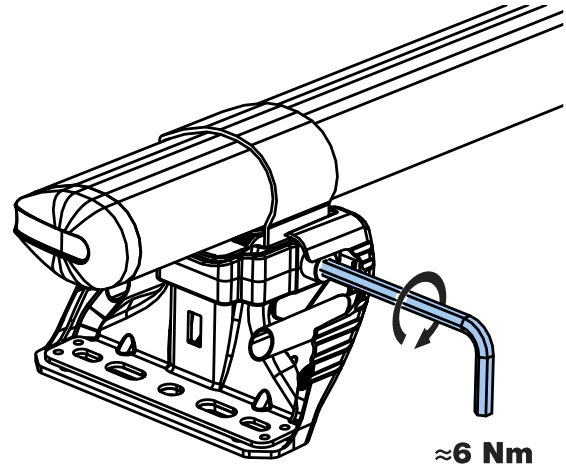

14.

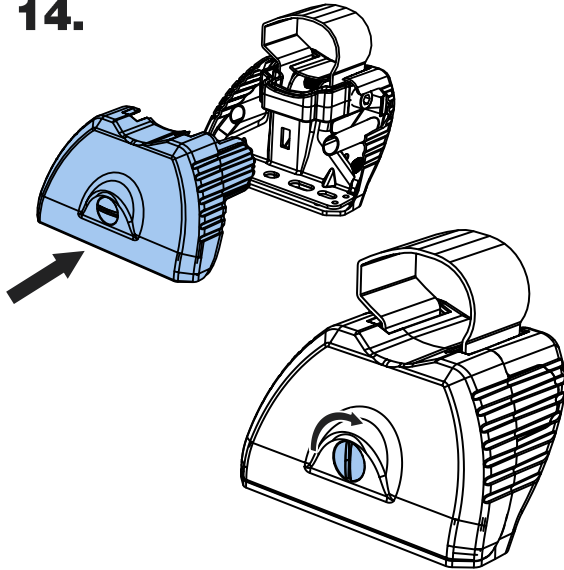

15.

